

JIUDING RADIATOR


Assembly & Operation Instructions

Tested in accordance with EN 442.

Please read these instructions carefully before installation.



 EN 442
TESTED TO STANDARD



JD6015DF · bathroom / towel radiator 卫浴

Tools required: screwdrivers (flat & cross) · spirit level · adjustable spanner · tape measure · pencil · electric drill with Ø8 mm masonry bit.

PACKAGE CONTENTS

Supplied with this series — Bathroom / towel radiator (卫浴):

 Round-head screw M6×15 ×4 圆头螺丝	 Self-tapping screw M4×10 ×4 自攻螺丝	 Expansion bolt M6×50 ×4 膨胀螺栓
 Wall plug ×4 膨胀管	 Washer ×4 垫圈	 Threaded post — female ×4 螺母柱·母柱
 Threaded post — male ×4 螺母柱·子柱	 Air vent ×2 排气阀	 Blanking plug ×1 堵头

Keep all packaging until the brackets and small parts are secured.

Bottom-connection version: the accessory pack includes 2 additional blanking plugs. 底部连接款：配件包另含 2 个堵头。

BEFORE YOU START — SAFETY

- Installation must be carried out by a qualified plumber or heating engineer.
- For closed (sealed) central-heating systems only. Not for outdoor use, high-humidity rooms (pools, saunas, car washes) or where corrosive media are present.
- Maximum working pressure: as stated on the product label — do not exceed it. Maximum flow temperature: 100 °C. If in doubt, check the product label.
- Dimensions, sections/panels and pipe layout may differ from the illustrations.
- Keep a minimum 150 mm gap between the floor and the bottom of the radiator.
- Before drilling, check the wall for concealed water, gas or electrical lines.
- Wear suitable protective gloves and footwear.
- The radiator becomes hot in use — keep children away; never use it as a step or ladder.

INSTALLATION

Follow the 5 illustrated steps on the reverse side ► 安装见背面5步图示：

- Remove the pre-fitted plugs. 拆下预装堵头。
- Fit the air vents (H×2). 装排气阀 (H×2)。
- Fit the nut-posts to the radiator (A×4 + G×4). 把螺母柱装到本体 (A×4+G×4)。
- Mark & drill the wall (Ø10 mm), min. 150 mm above the floor; insert the wall plugs (C×4 / D×4 / F×4). 墙面定位钻孔Ø10、离地≥150mm，塞入膨胀管。
- Hang the radiator on the wall posts and lock it (B×4). 挂装并锁定 (B×4)。

FILLING & VENTING

- Open the air vent.
- Slightly open the inlet valve (about 10%) with the outlet valve closed; fill slowly.
- When water reaches the vent, close the air vent.
- Fully open both valves and run the system.
- Open the air vent again to release any remaining air.

Note: for radiators over 25 kg use a lifting aid or ask for assistance.

AFTER INSTALLATION — CARE

- Flush the whole system before use; add a suitable corrosion inhibitor to the system water.
- Keep the system filled with water in and out of the heating season; drain only in emergencies.
- Clean with a soft, damp cloth only — no abrasives, scouring agents or solvents.
- A commissioning test is required; do not operate the radiator without it.